

FIG. 1

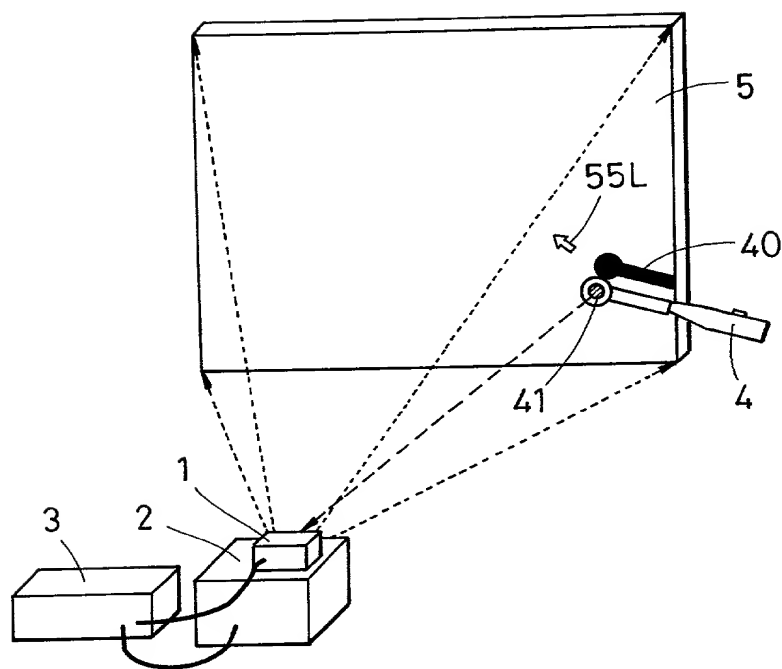


FIG. 2

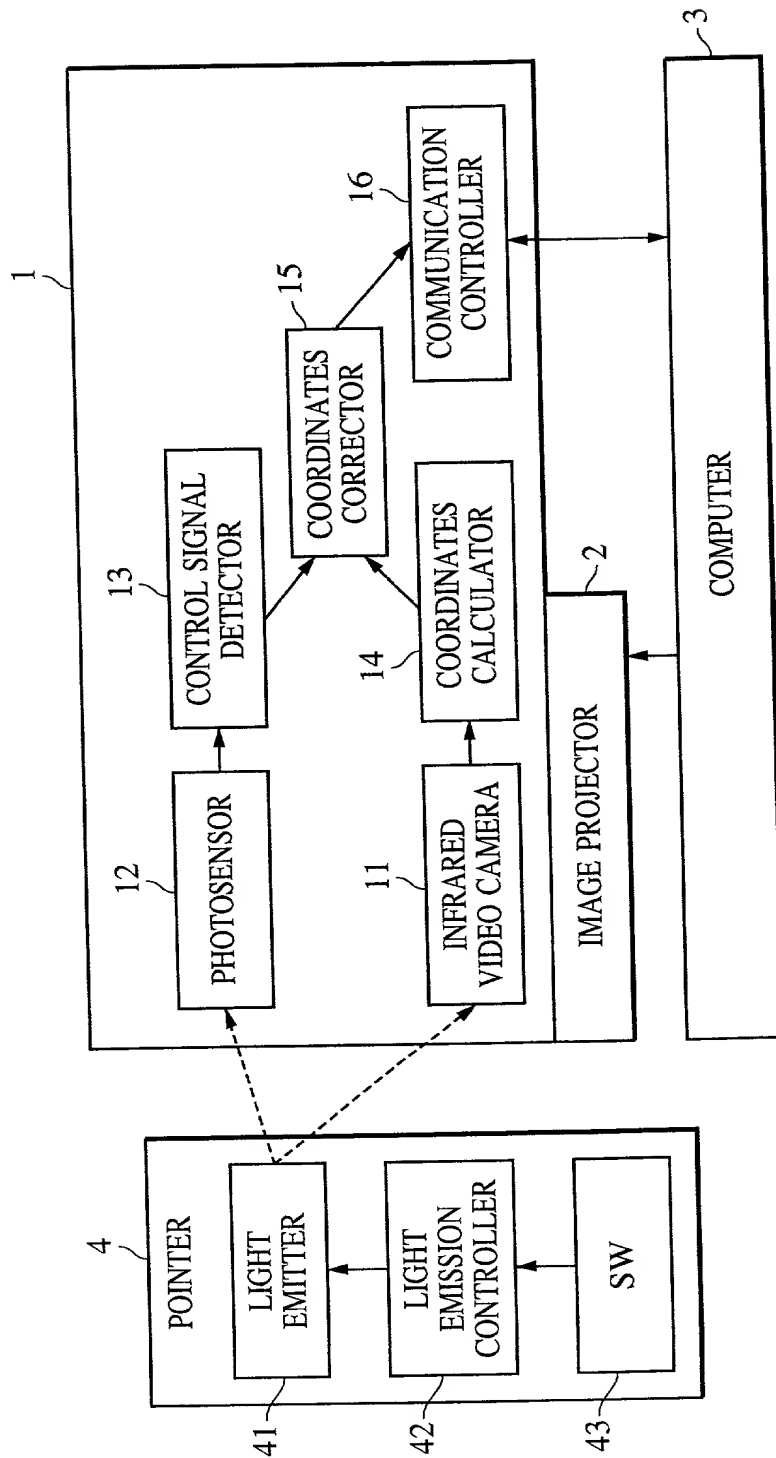


FIG. 3


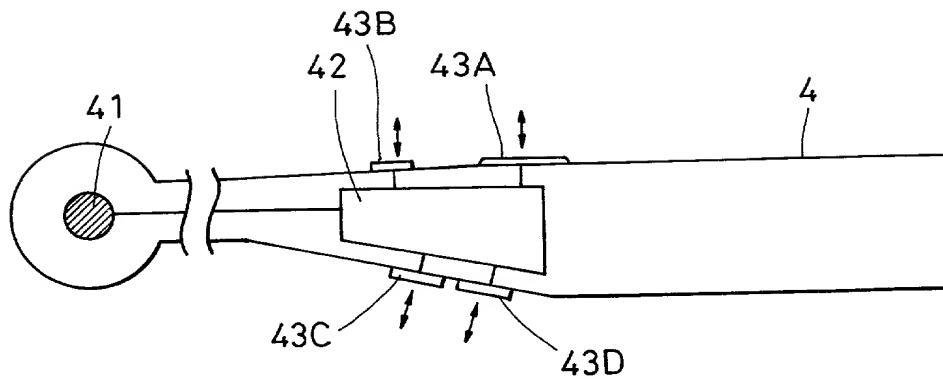


FIG. 4

SWITCH A	SWITCH B	SWITCH C	SWITCH D	EMISSION	PEN DOWN	PEN BUTTON	CURSOR
X	X	-	-	OFF	OFF	OFF	-
O	X	X	X	ON	OFF	OFF	-
O	X	O	X	ON	ON	OFF	-
O	X	X	O	ON	OFF	ON	-
O	X	O	O	ON	ON	ON	-
-	O	O	X	ON	OFF	OFF	LEFT
-	O	X	O	ON	OFF	OFF	RIGHT

FIG. 5

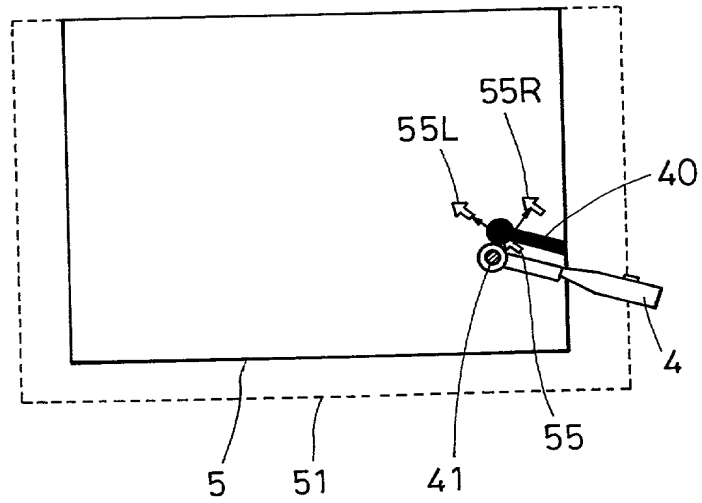

6/17

FIG. 6A

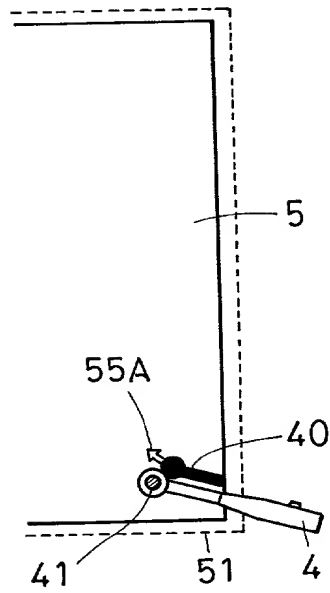


FIG. 6B

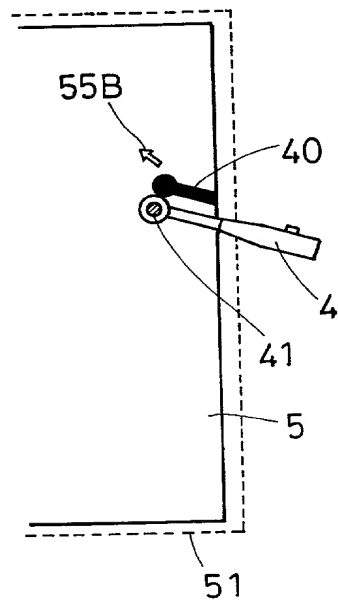


FIG. 7

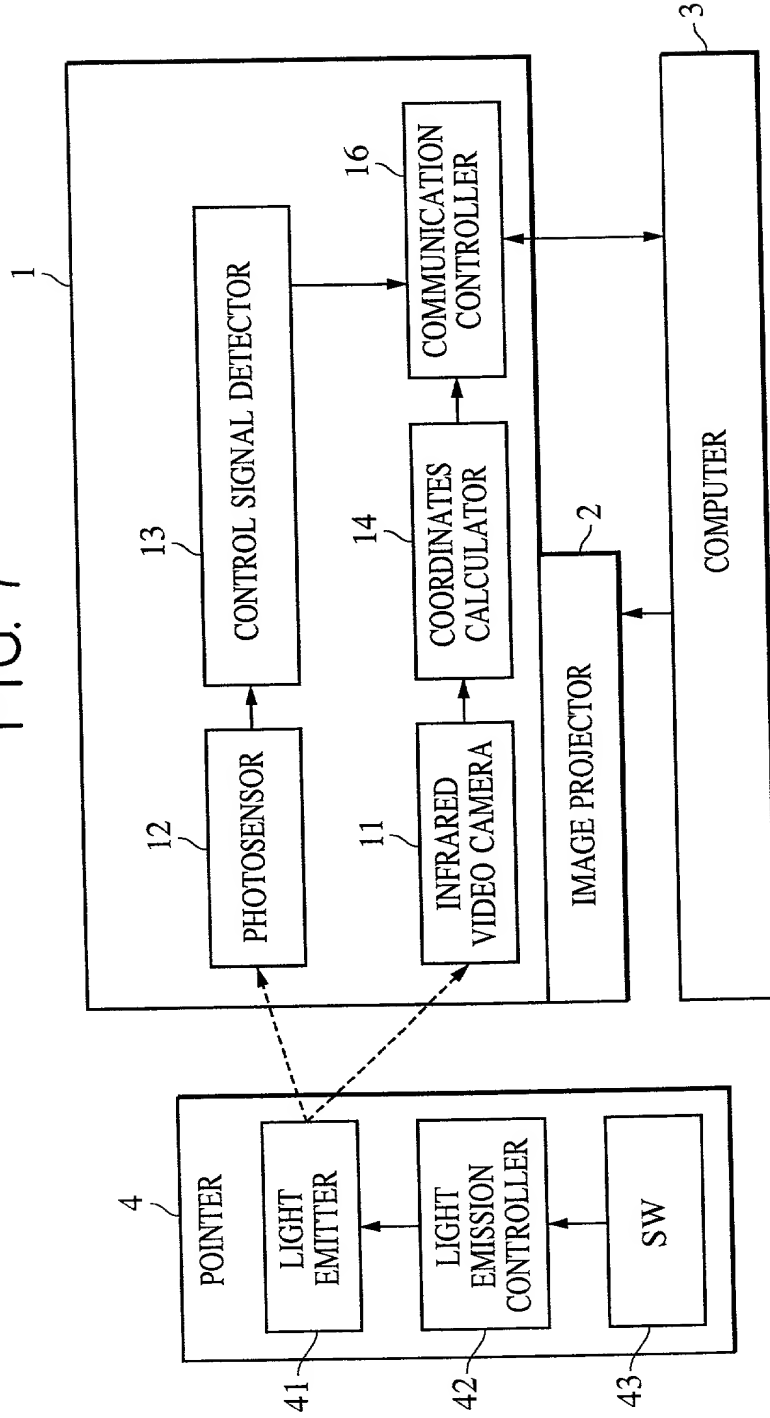


FIG. 8

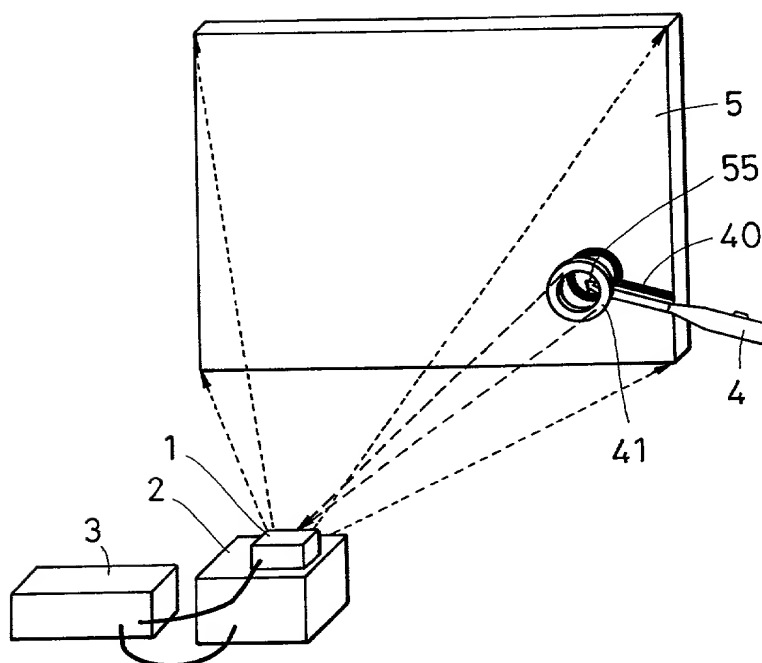




FIG. 9

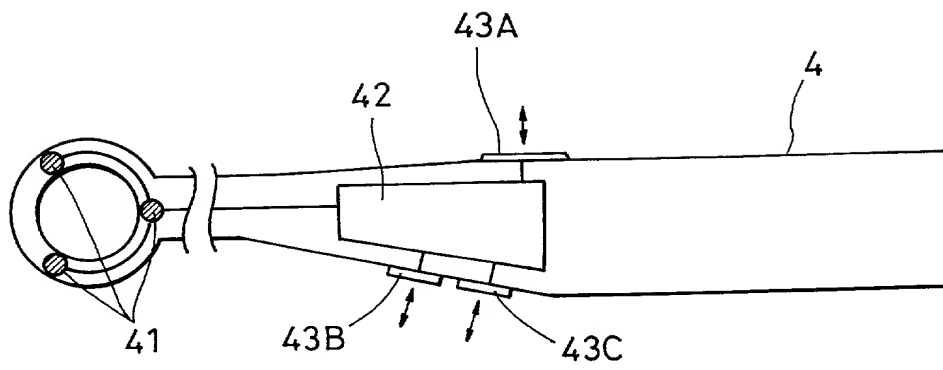


FIG. 10

SWITCH A	SWITCH B	SWITCH C	EMISSION	PEN DOWN	PEN BUTTON
X	-	-	OFF	OFF	OFF
O	X	X	ON	OFF	OFF
O	O	X	ON	ON	OFF
O	X	O	ON	OFF	ON
O	O	O	ON	ON	ON



FIG. 12

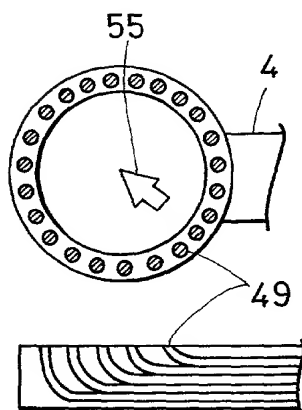


FIG. 13

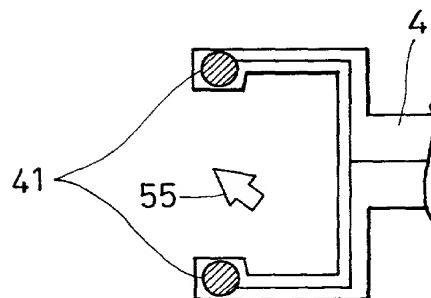


FIG. 14

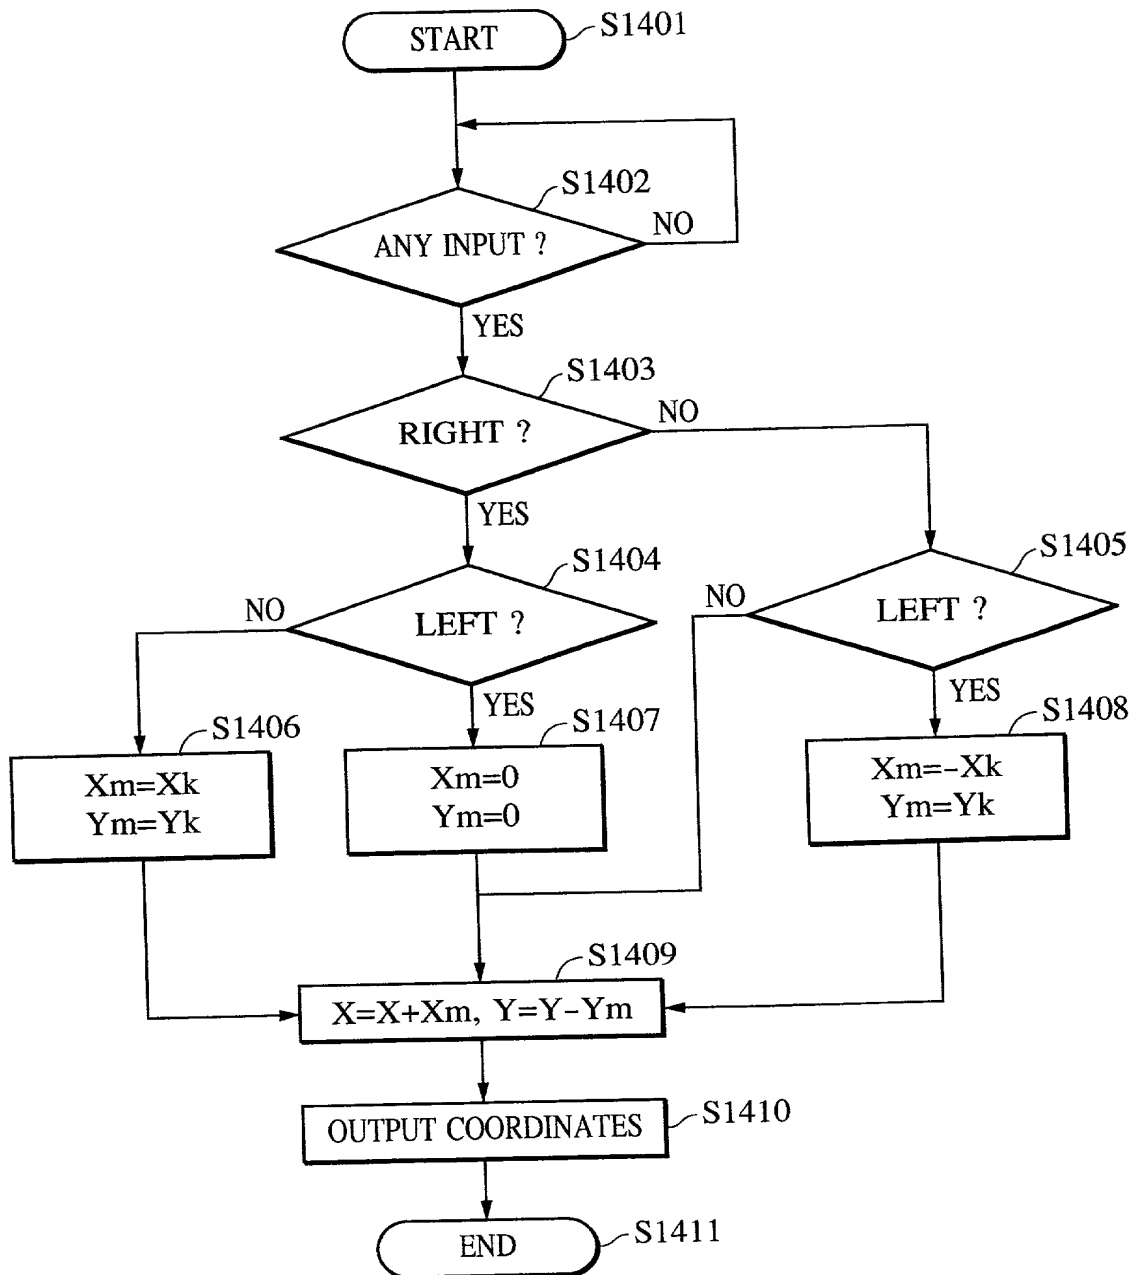


FIG. 15

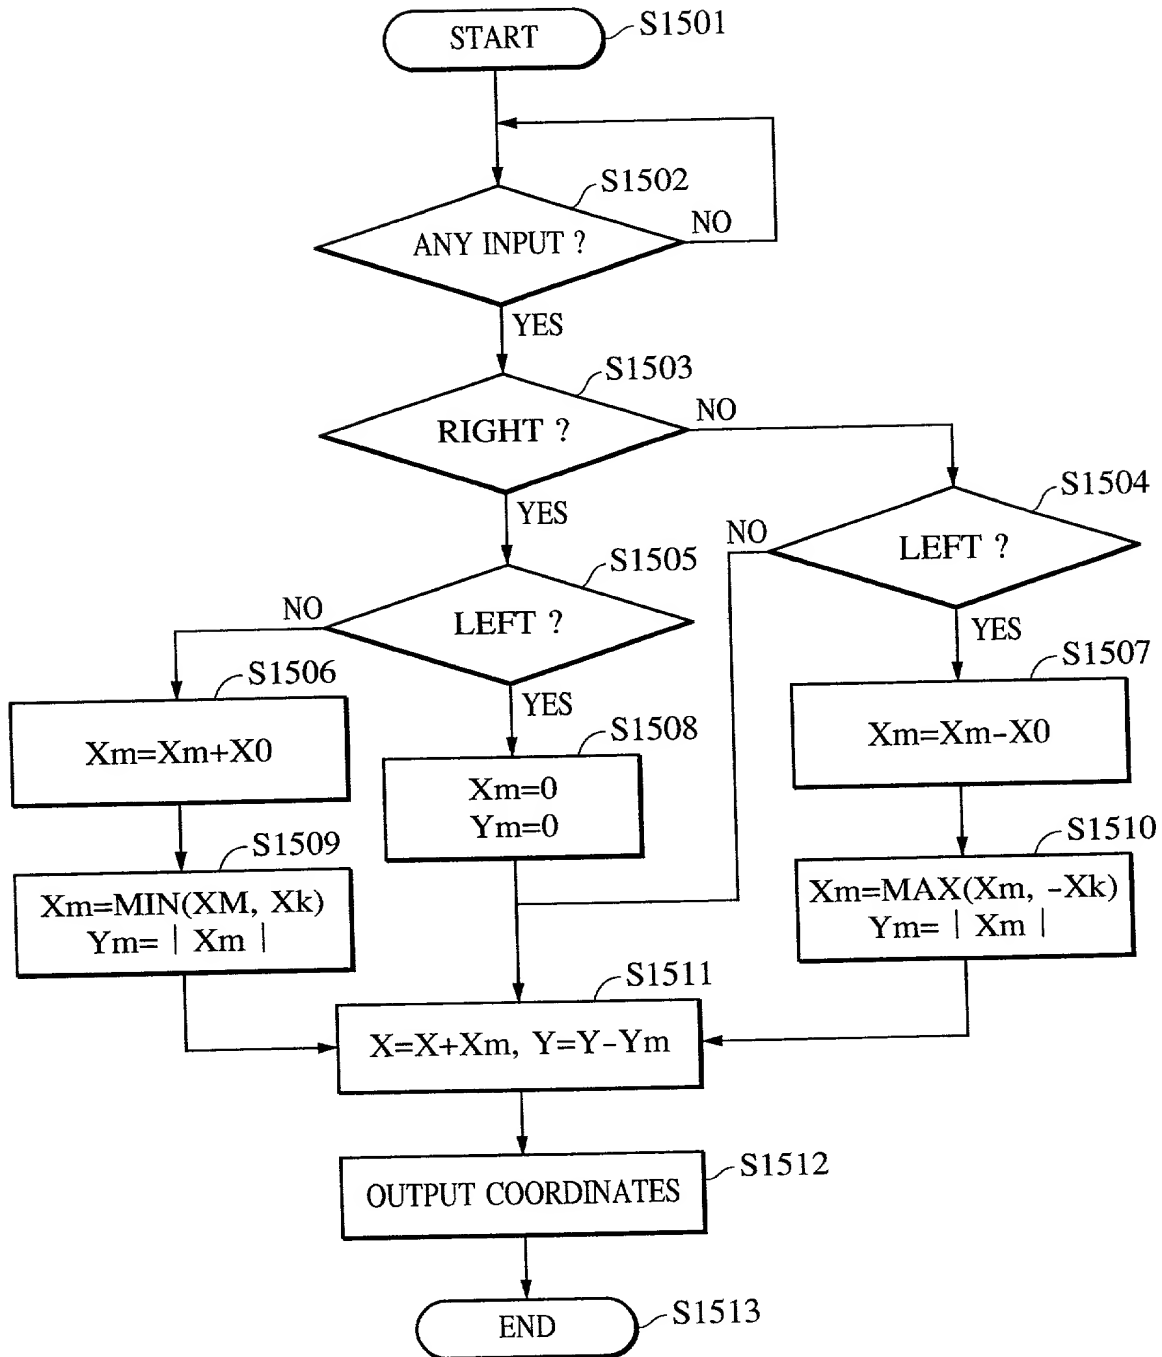


FIG. 16

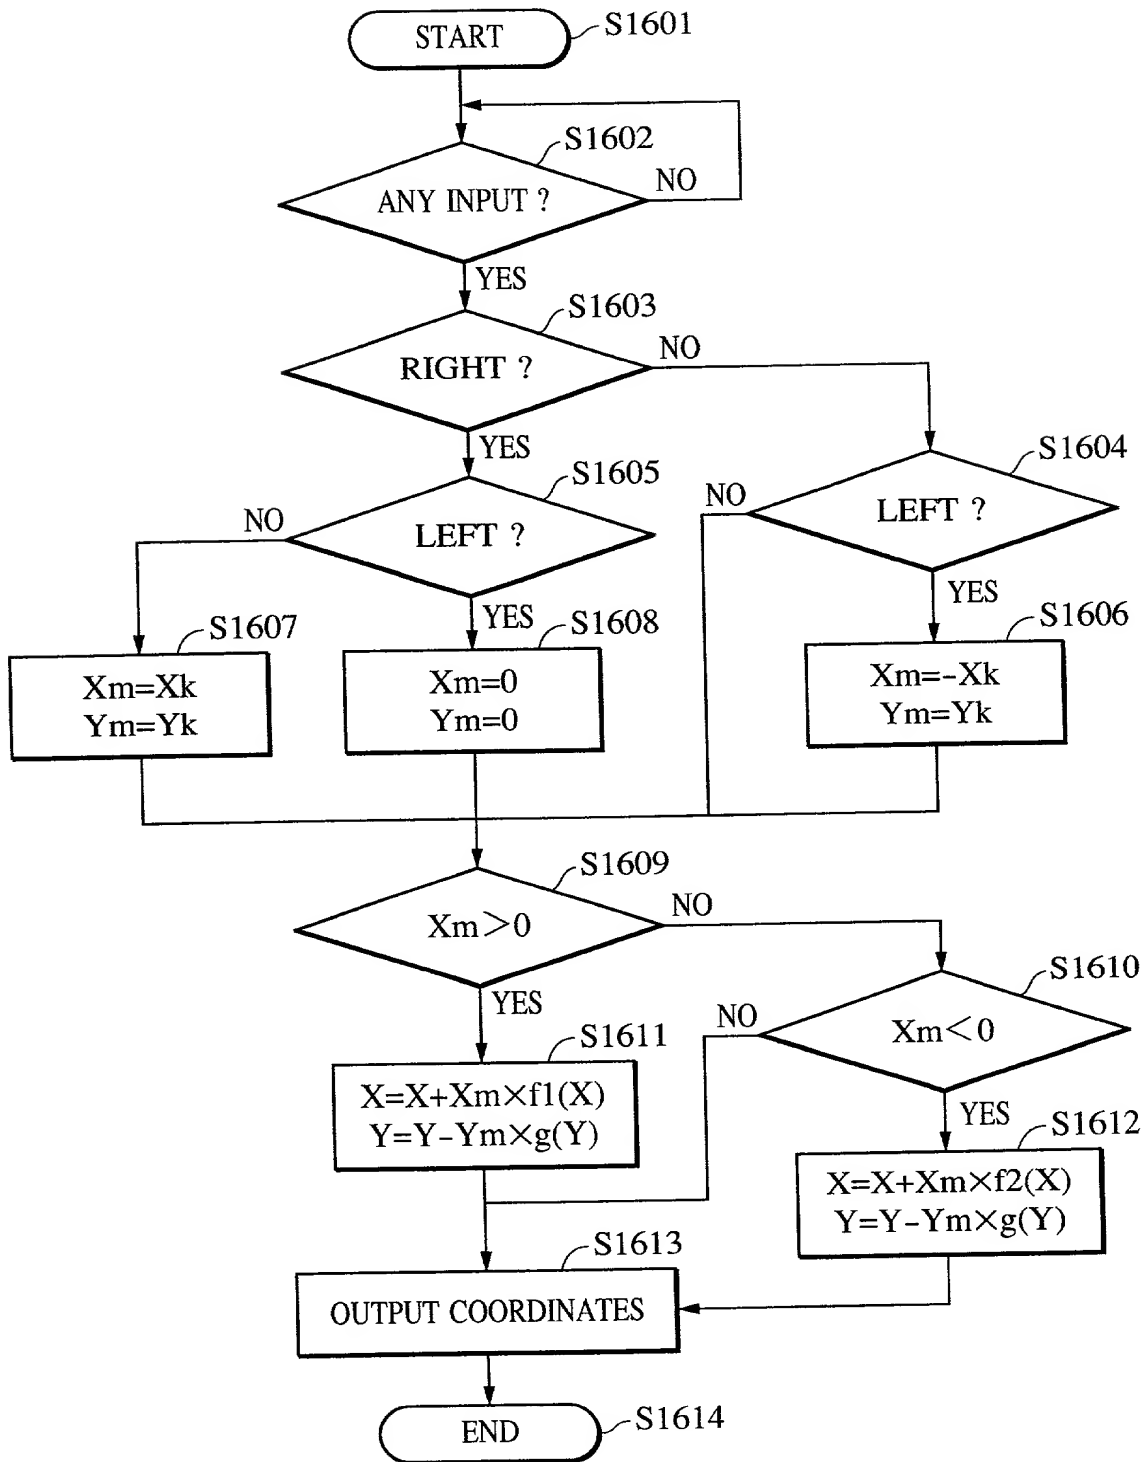


FIG. 17

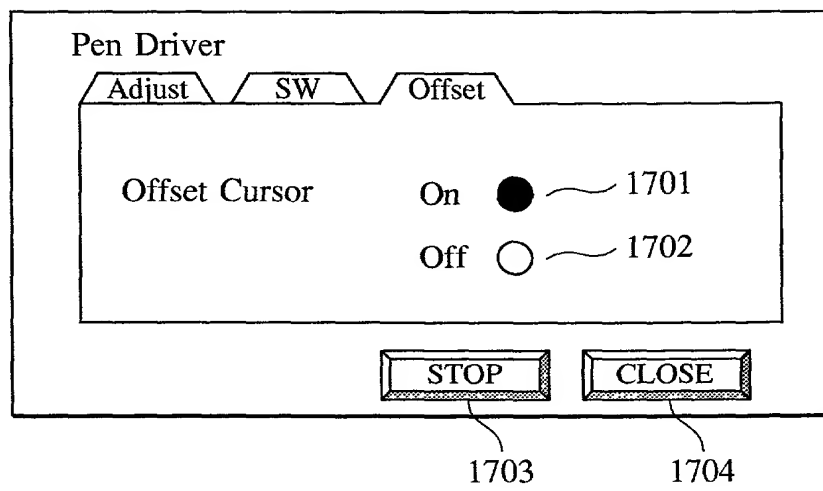


FIG. 18

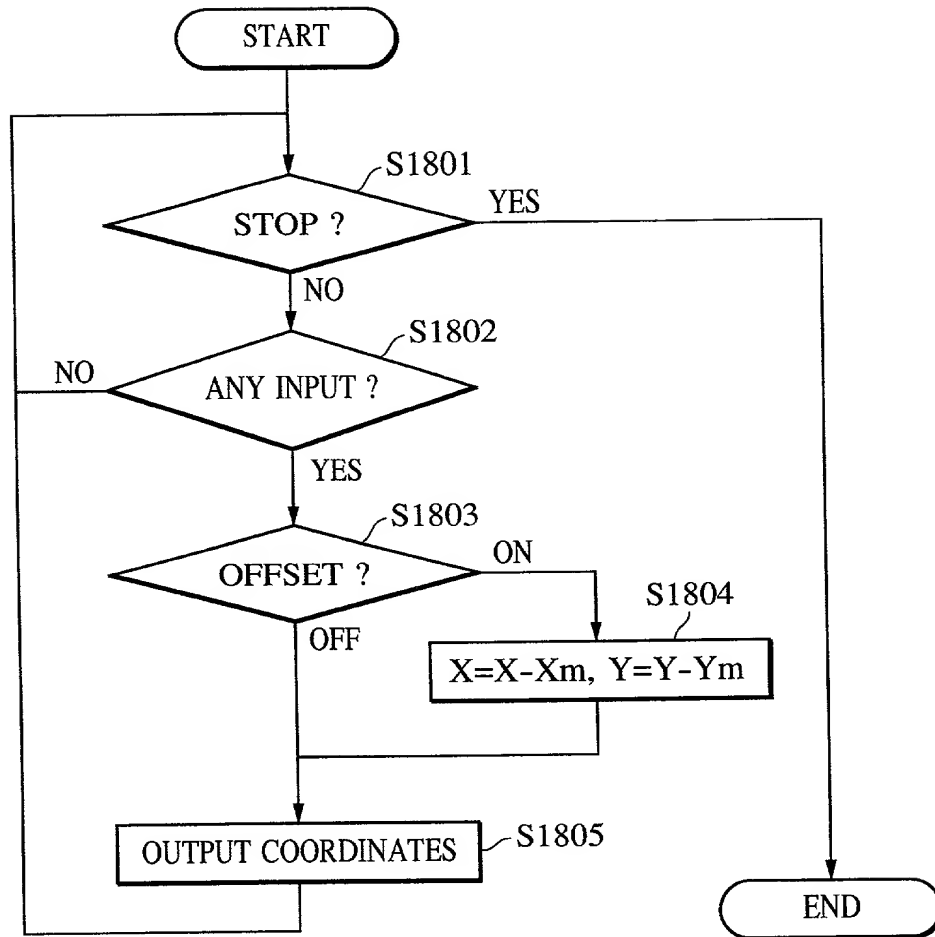




FIG. 19

